

Step 1: Turn ON the large red button.



 
Step 2: Make sure that the main volume knob is up all the way.



Step 3: Adjust other knobs to desired volume.



Bluetooth: To pair a device, press the pair button on the Bluetooth receiver pictured below.



Hold the pairing button until the status light is blinking quickly. Then pair your phone to the Bluetooth receiver. The receiver will appear as **DN-300BR** on your phone. You will know that you have succeeded when the status light is solid.

If you wish to switch devices hold down the pairing button. Make sure that the volume of your device is all the way up and that the output volume of the Bluetooth receiver is at noon.

If the device does not have Bluetooth capabilities, you can plug into the headphone jack of the device with the cable that is in the rack. Its volume is controlled by the iPod channel. Make sure that the volume of your device is at full.


The radio is above the Bluetooth receiver. Use the tune up and down to find your desired station. If you have increased the volume and still do not hear the radio, make sure that it is not muted by pressing the mute button.



Step 4: The microphone is on channel 1.



Turn on the handheld by pushing the grey button upwards towards the screen. You will have succeeded when the button turns green.

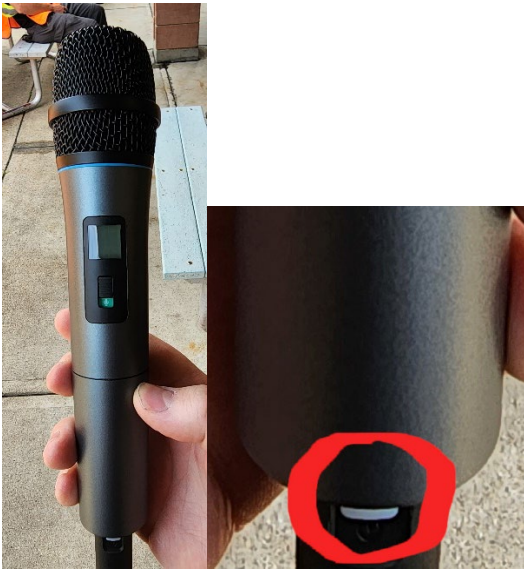

If it does not turn on it means that the battery is dead. To swap batteries twist the bottom of the handheld and remove the batteries.



While speaking into the microphone adjust the volume knob. If you are adjusting and do not hear yourself, make sure that the mute slider is not on.



If you do not hear yourself and the handheld is not muted. Make sure that the handheld is synced with the receiver. Press and hold the sync button on the receiver. While still holding the sync receiver on the receiver press the sync button on the bottom of the handheld. The device will be synced when the handheld displays the same numbers as the receiver.



Step 5: To turn off the system **ONLY PRESS THE BIG RED BUTTON**. There is no need to power off the other devices in the rack.

NOTES:

If there is no volume from everything you might have pressed the mic output by accident. This mutes the mains. Just press the mic button again to disengage the output.

